

10 Troubleshooting

Motor not running

Check if:

- the Vario is switched on.
- the mains voltage is correct and if the mains plug is inserted correctly into the fixed mains socket.
- the internal battery is charged (only AC/DC version under battery operation)
- the fuse on the bottom of the Vario is not defective. For replacing the defective fuse see chapter 11.

Insufficient vacuum

Check if:

- the vacuum regulator is set correctly.
- the tubings are not defective or broken. If necessary, replace.
- all plug-in connections are tight.
- the overflow protection is deactivated/open. If the overflow protection is activated, deactivate as shown under 6.3a/2.2.
- the suction jar/lid have no cracks, brittle areas, discolouration. Replace if necessary.
- the disposable system has no cracks, brittle areas, discolouration. Replace if necessary.
- filter is not clogged. To test if the filter is clogged see chapter 17.
- the QuatroFlex is defective. To replace the QuatroFlex see chapter 13.

No LED lit (AC/DC version only)

The rechargeable battery is fully charged.

LED lit up (AC/DC version only)

- The rechargeable battery is being charged.
- The pump is connected to the mains.

LED blinks slowly (AC/DC version only)

The rechargeable battery is soon empty.

LED blinks rapidly (AC/DC version only)

The rechargeable battery is defective. For replacing the defective battery see chapter 14.